

# THE BOSTON COLLECTION


streamlined minimalist style

CONGRATULATIONS ON THE PURCHASE  
OF YOUR .....

## BOSTON 2 DRW BEDSIDE

WELCOME TO THE BOS-BS52 .....

### INSTRUCTION MANUAL

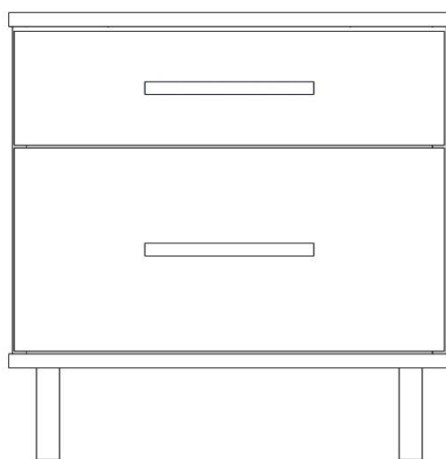

## DID YOU KNOW.....

.....the **Boston** Collection is manufactured right here in New Zealand - by New Zealanders, for New Zealanders. Honest Kiwi Quality that is backed by our signature 5 Year Guarantee\*. If by any chance you have a problem during this period, OUR promise to YOU is that we will repair or replace. Additionally, being based right in here New Zealand our experienced team's expertise is near at hand; if you have any problems at all during the assembly process, you can give us a call on our Freephone number (0800 100858) or email us at [sales@compacfurniture.co.nz](mailto:sales@compacfurniture.co.nz) during normal working hours and we will step you through the process.

The Boston Collection is a **modern and stylish collection**, designed in response to latest interior trends, both in New Zealand and overseas. **Finished in a latest European trending Concise Walnut woodgrain**, The **Boston Collection is right up with the minute**. Paired with a **minimalistic streamlined style** and an **emphasis on strong horizontal lines**, this collection is guaranteed to impress. Fully overlaid drawers give an illusion of length, attributing to the **slim line effect**. Thin silver extruded handles enhance this effect, adding to the overall horizontal theme without complicating surface areas. Tall slim chrome feet contribute the slim-line effect, and create a feeling of space, by lifting the unit up off the ground.

The Boston Collection is constructed from NZ made MDF, a renewable resource from sustainably managed pine forests. This means you can have complete confidence that with The Boston Collection, you are making an environmentally responsible choice.

**If you have any questions please visit [www.warehousefurniture.co.nz](http://www.warehousefurniture.co.nz) or call the manufacturers direct on 0800 100 858.**

## WHERE TO ASSEMBLE YOUR BEDSIDE

Assemble your Bedside on a clean and smooth surface, free of anything which may damage the finished surfaces. A clean, carpeted floor is ideal. If assembling on a workbench or table we suggest you cover it with the carton the Bedside was packaged in.

**Warning!** Never leave hardware parts where children can reach them. Small parts may be a choking hazard!

## \* 5 YEAR GUARANTEE

The Boston Collection carries a **5 year guarantee** against defective material or workmanship, excluding misuse and normal wear and tear. Obviously, as this unit is customer-assembled we cannot guarantee cabinet failure or damage from incorrect assembly. **All claims need proof of purchase – to ensure this register your Bedside at [www.warehousefurniture.co.nz](http://www.warehousefurniture.co.nz).**

Follow the assembly instructions carefully and take note of the precautions below.

- **Avoid direct sunlight wherever possible.**
- **Keep cabinet in a dry place.**
- **Wipe off spilt liquids immediately.**
- **Avoid placing hot items directly on the surface.**
- **Clean with a slightly damp cloth and buff dry with a soft dry cloth - microfibre is ideal.**
- **Do not allow nail polish, removers, deodorant or other damaging chemicals to come into contact with the surface.**

# PARTS LIST

Please check you have all the necessary parts before beginning to assembling your Bedside. The measurements provided will help you to identify each part. If any parts are missing or damaged please contact the manufacturers directly, either via our website or our 0800 number. Do not call the store you bought the cabinet from as they will be unable to help you.















QTY	PART NAME	MEASUREMENTS	NOTES	MANUFACTURERS CODE
1	Top	480 x 396 x 15mm	Finished on one side. <i>Blue mark</i>	106163
1	Base	480 x 396 x 15mm	Finished on one side. <i>Purple mark</i>	106164
1	LH End	356 x 377 x 15mm	Finished on one side. <i>Green mark</i>	106165
1	RH End	356 x 377 x 15mm	Finished on one side. <i>Red mark</i>	106166
1	Small Drw Front	468 x 125 x 15mm	Finished on one side	106167
1	Large Drw Front	468 x 221 x 15mm	Finished on one side	106168
1	LH Drw Side – Sml	340 x 95 x 12mm	Plain 12mm	106137
1	LH Drw Side - Lrg	340 x 160 x 12mm	Plain 12mm	102813
1	RH Drw Side – Sml	340 x 95 x 12mm	Plain 12mm	106138
1	RH Drw Side - Lrg	340 x 160 x 12mm	Plain 12mm	102818
1	Drawer Back – Sml	392 x 90 x 12mm	Plain 12mm	106169
1	Drawer Back – Lrg	392 x 155 x 12mm	Plain 12mm	106170
2	Drawer Bottom	402 x 339 x 4mm	Plain 4mm	106171
1	Back Panel	376 x 462 x 4mm	Plain 4mm	106172

## COLOUR CODING

To help identify the parts, the main components are colour coded with a pen mark on the back edge of the panel. (The unfinished edge.)


- **RED**                      **Right Hand Parts.** (E.g. RH End, RH Division, RH Drawer Side.)
- **GREEN**                  **Left Hand Parts.** (E.g. LH End, LH Division, LH Drawer Side.)
- **BLUE**                    **Tops**
- **PURPLE**                **Bases**

## HARDWARE LIST

CABINET HARDWARE				
QTY	PART NAME	ASSEMBLY CODE	PICTURE	MANUFACTURERS CODE
4	Connecting Bolts	H1		102649
4	15mm Cams	H2		102511
4	Large Screws	H5		102648
4	Large Dowels	H15		102515
16	Panhead Screw	H7		106118
8	Drawer Slide Screws	H4		102652
2	Metal Drawer Slide sets	H21		102480
2	Bar Handles	H56		102472
4	Tall Feet	H55		106003
DRAWER HARDWARE				
4	Connecting Bolts	H1		102649
4	12mm Cams	H3		102510
8	Small Screws	H6		102642
8	Screws	H9		102645
4	Large Dowels	H15		102515

# CAM INSTALLATION & OPERATION GUIDE


The Cam and Connecting Bolt system is used to put your unit together. Below is an explanation of how this system works.

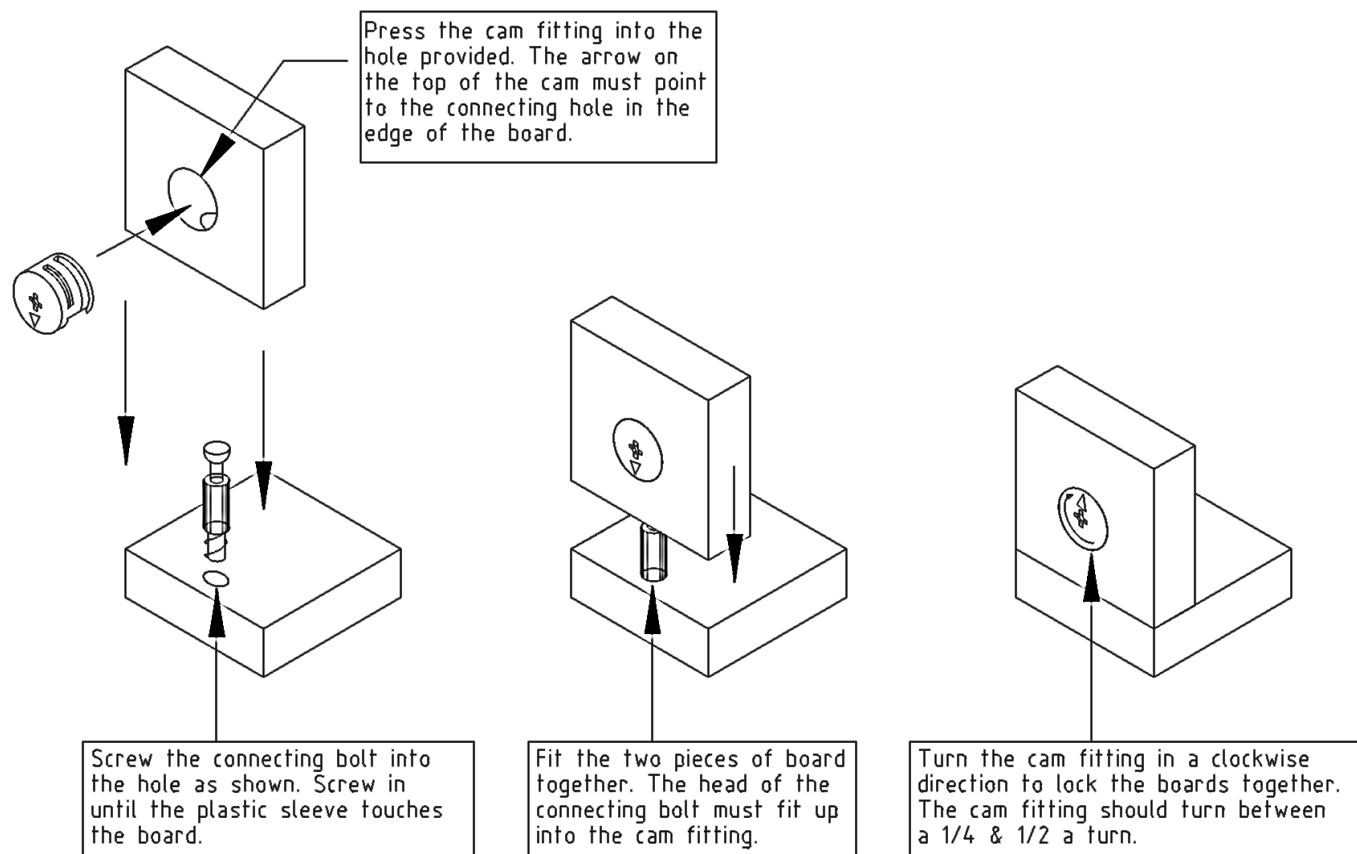


To see a demonstration click on the assembly assistance tab at [www.warehousefurniture.co.nz](http://www.warehousefurniture.co.nz).

## DRAWER SLIDES GUIDE

Your pack will contain 2 sets of Metal Drawer Slides. These are bundled together with adhesive tape. Each set comprises of 4 components. Undo the tape on one set at a time and separate the parts.




LEFT HAND PART (DL)



RIGHT HAND PART (DR)

The Drawer Slide components shown above are attached to the **drawer**. They have the letters **DL** or **DR** stamped on them to indicate left hand or right hand components. Put these parts aside for attaching to the drawer later on.

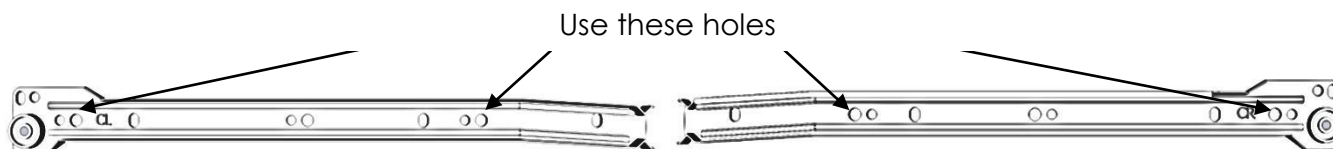

LEFT HAND PART (CL)


RIGHT HAND PART (CR)

The Drawer Slide components shown above are to be attached to the **cabinet**. They have letters **CL** or **CR** stamped on them to indicate left hand or right hand components. You will need these for steps 2 and 3.

# INSTALL THE HARDWARE


## STEP 1 - TOP

- Lay the Top of the unit finished side down on a clean, clear surface.
- Screw four **H1 Connecting Bolts** into the holes as indicated in the drawing below

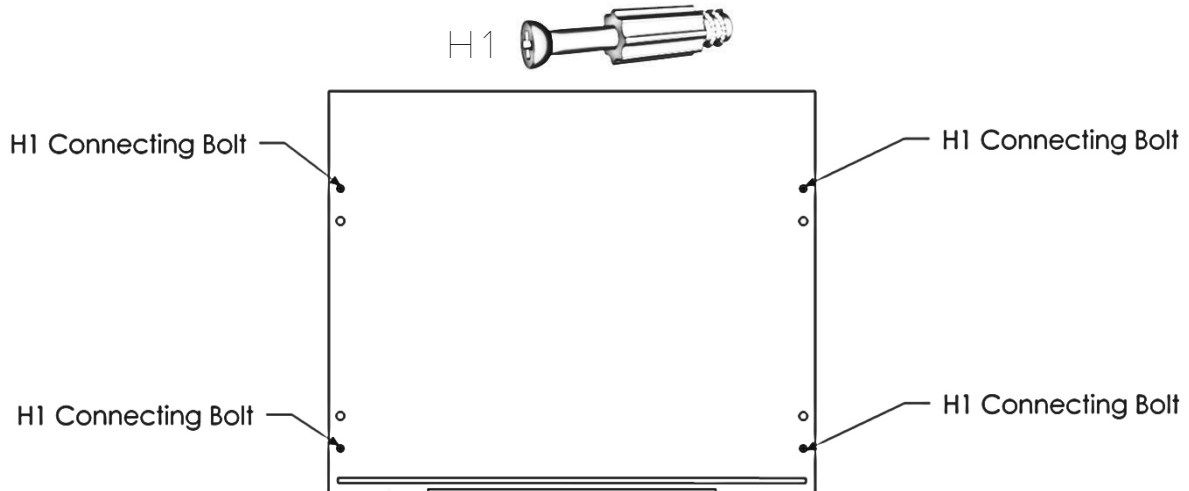


## STEP 2 - LH END

- Lay the **LH End** on a smooth clean surface with holes facing upwards.
- Attach two **LH Drawer Slides (CL)** to the LH End using the **H4 Drawer Slide Screws**. Use the holes as indicated in the diagram below - each slide requires two screws. Ensure that the end of the Slide with the wheel faces towards the finished edge of the End.
- Insert two **H2 Large Cams** as shown in diagram. Ensure the arrow on the top of the Cam points towards the top edge of the End.
- Push two **H15 Dowels** into the top edge of the End.

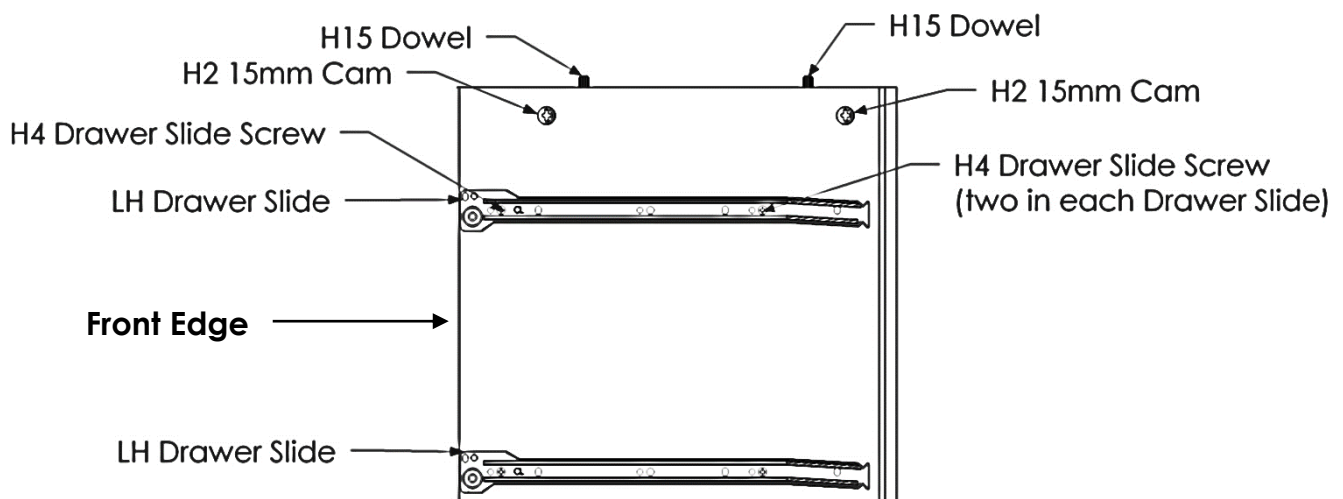

## STEP 3 - RH END


- Lay the **RH End** on a smooth clean surface with holes facing upwards.
- Attach two **RH Drawer Slides (CR)** to the RH End using the **H4 Drawer Slide Screws**. Use the holes as indicated in the diagram below - each slide requires two screws. Ensure that the end of the Slide with the wheel faces towards the finished edge of the End.
- Insert two **H2 Large Cams** as shown in diagram. Ensure the arrow on the top of the Cam points towards the top edge of the End.
- Push two **H15 Dowels** into the top edge of the End.

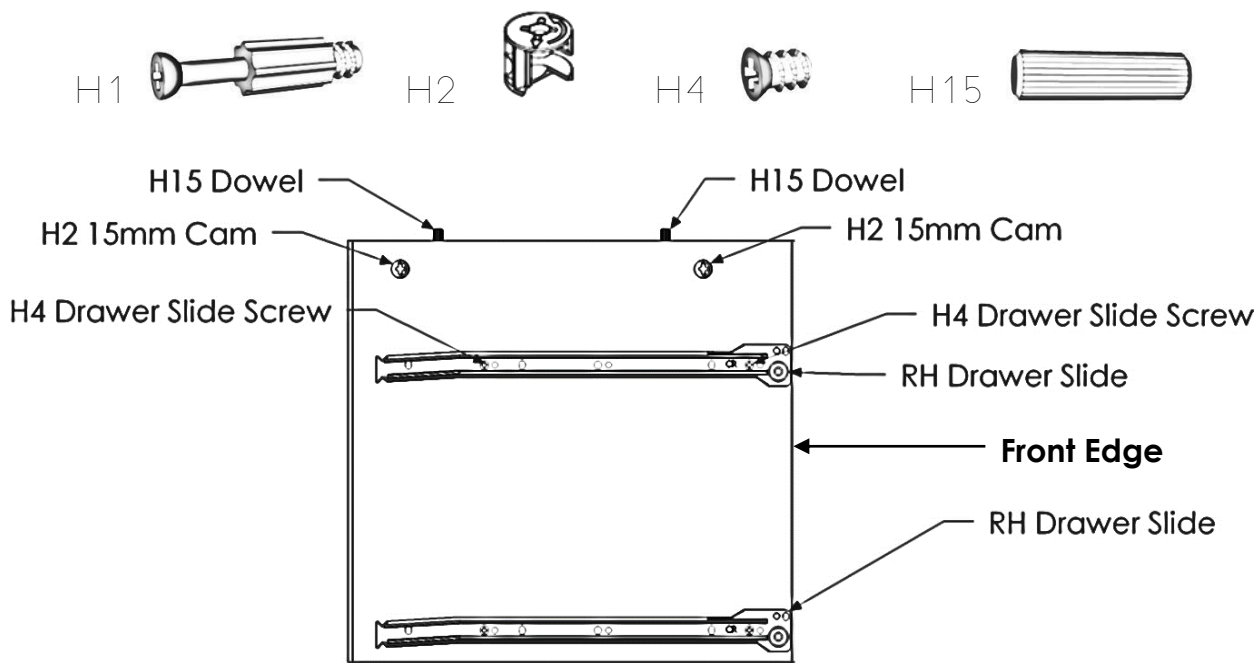

## ASSEMBLE THE UNIT


## STEP 4 - ENDS TO TOP

- Stand the Top on its back edge.
- Fit the LH End and RH Ends to the underside of the Top. The Connecting Bolts in the Top will fit into the Metal Cams in the Ends.
- Turn the Metal Cams in a clockwise direction to lock the Top to the Ends. Ensure they turn a least a  $\frac{1}{4}$  to  $\frac{1}{2}$  a turn.

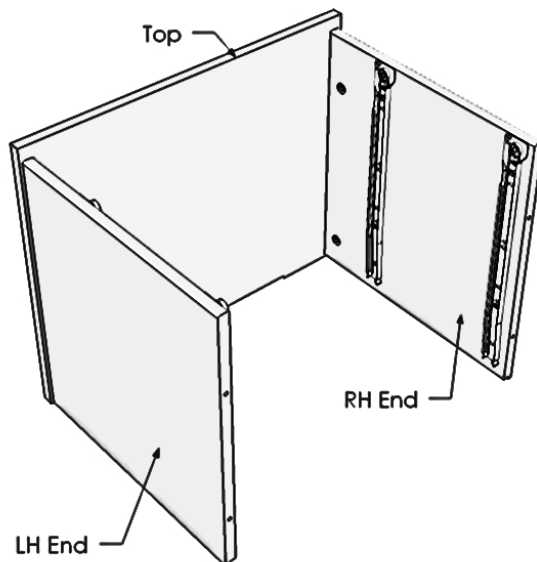


## STEP 5 - BACK PANEL

- Carefully turn the bedside onto its Top.
- Take the Back Panel. Slide this into place between the grooves in the Ends.

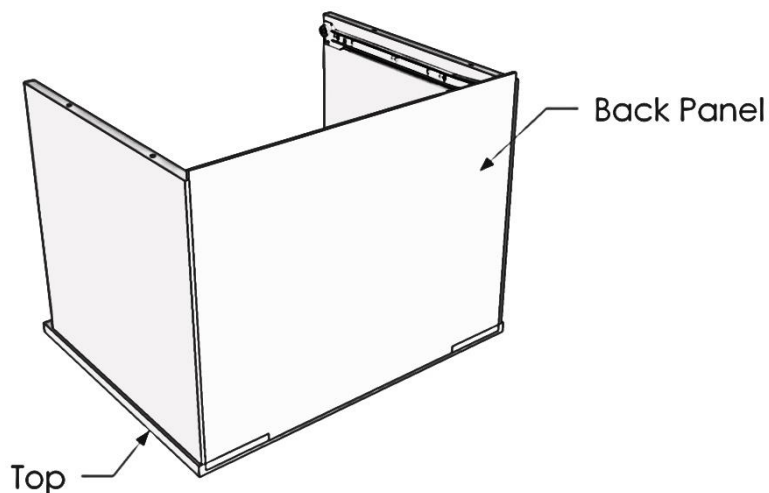


## STEP 6 - BASE

- Attach the Base using the four **H5 Large Screws**. Ensure the finished side of the Base faces into the inside of the Bedside

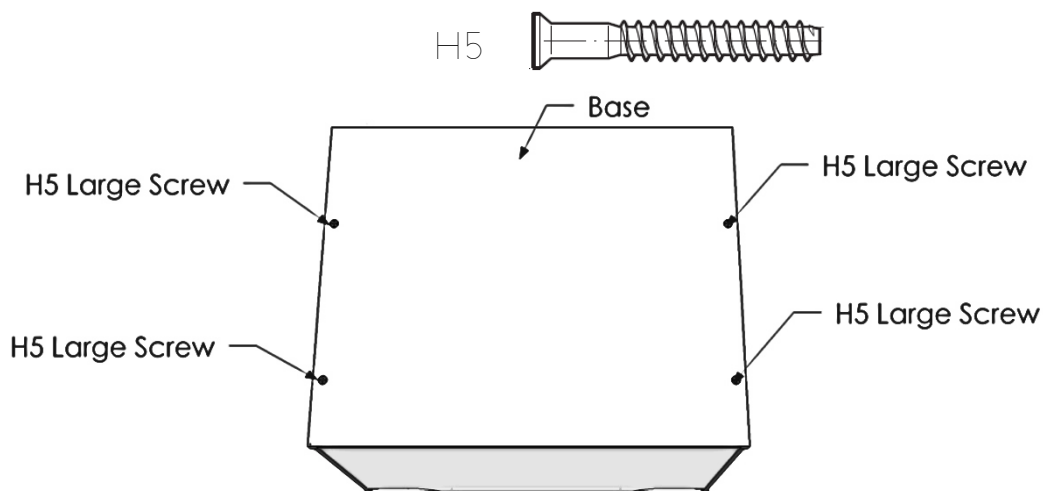

## STEP 7 - BASE


- Next screw on the four Tall Feet using the **H7 Panhead Screws**. Use the pre-drilled holes.
- Turn the unit upright. Be careful not to drag or scratch it.

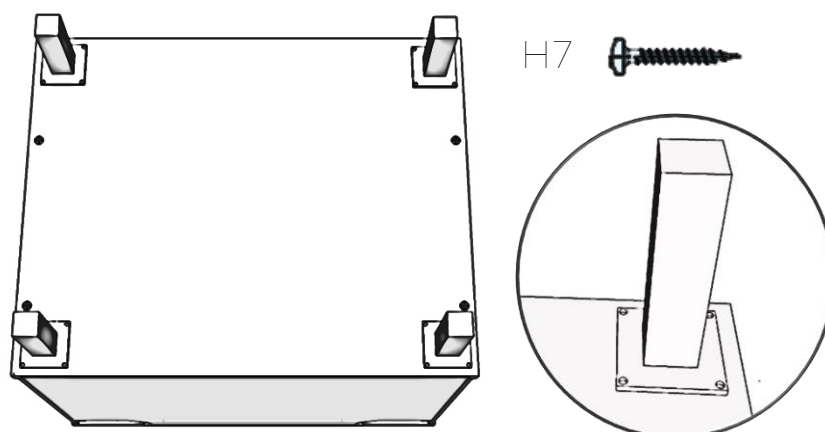




# ASSEMBLE THE DRAWERS

Your Boston 2 Drawer Bedside has two drawers. Both Drawers are constructed from the same parts and are therefore assembled the same way.

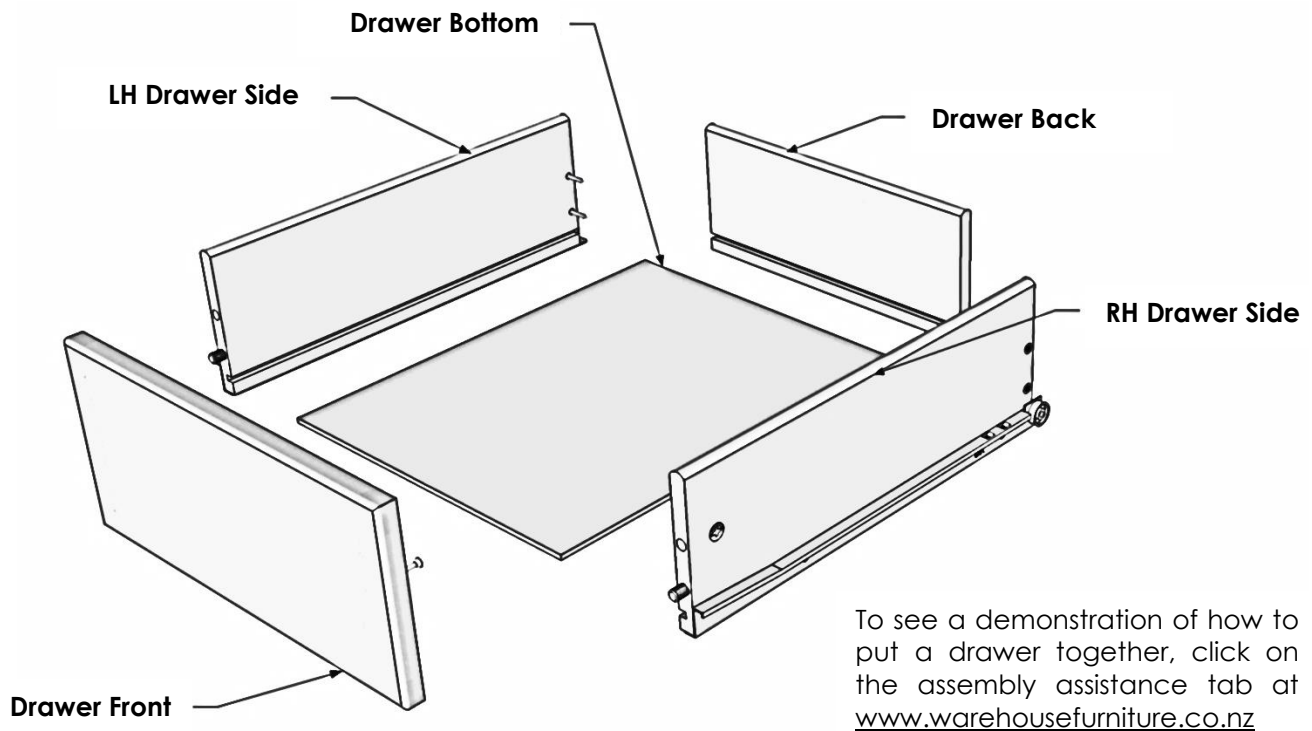


## STEP 8 - INSTALL HARDWARE /DRAWERS

- Install the hardware in the drawer parts as shown below. *NOTE: Be sure that the arrow on the Small Cam points to the end of the drawer side nearest it.*

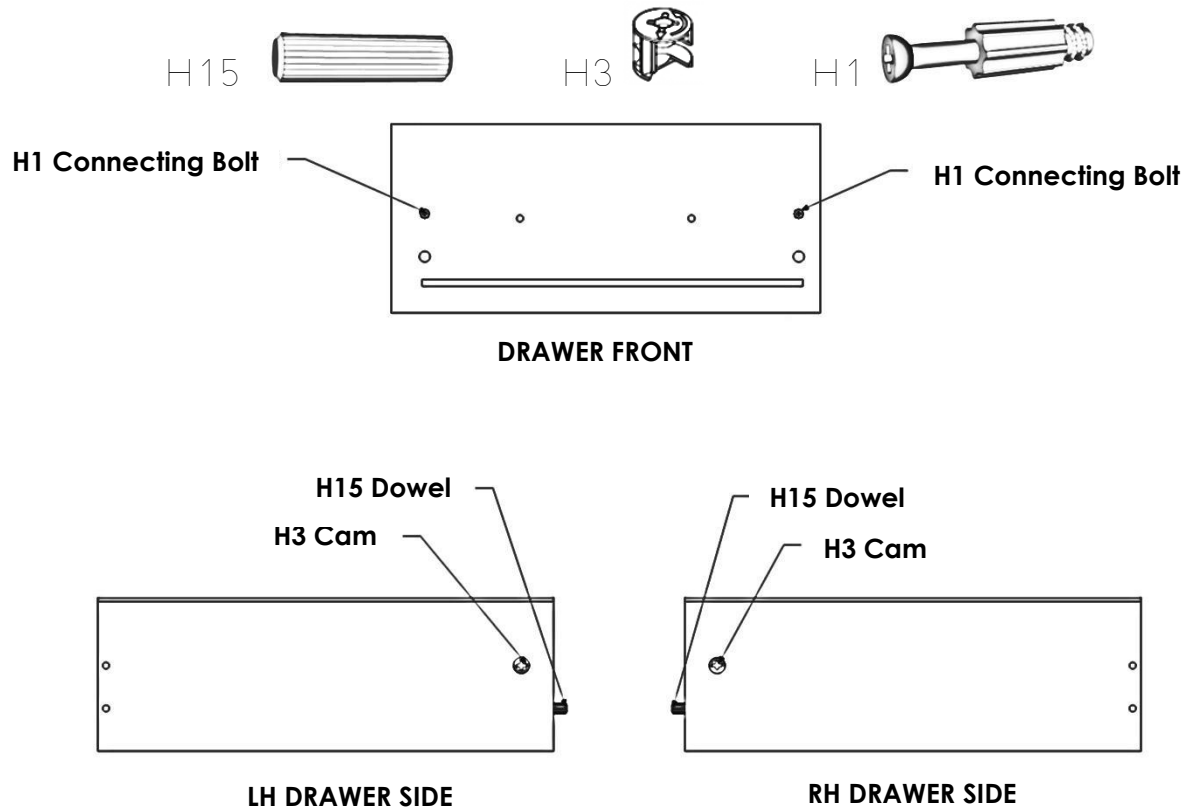


## STEP 9 - ASSEMBLE THE SMALL DRAWERS

- Lay the **Drawer Front** face down on a smooth, clean surface.
- Attach the LH and RH **Drawer Sides** by fitting them into place over the **Connecting Bolts** installed in the Drawer Front.
- Turn the **Small Cams** clockwise to lock the Drawer Sides in place.
- Slide the **Drawer Bottom** into place in the grooves in the Drawer Sides and Drawer Front.
- Fit the **Drawer Back** into place between the Drawer Sides. The groove in the Drawer Back will fit over the end of the Drawer Bottom.
- Secure the Drawer Sides to the Drawer Back with four **H9 Screws** as shown below.

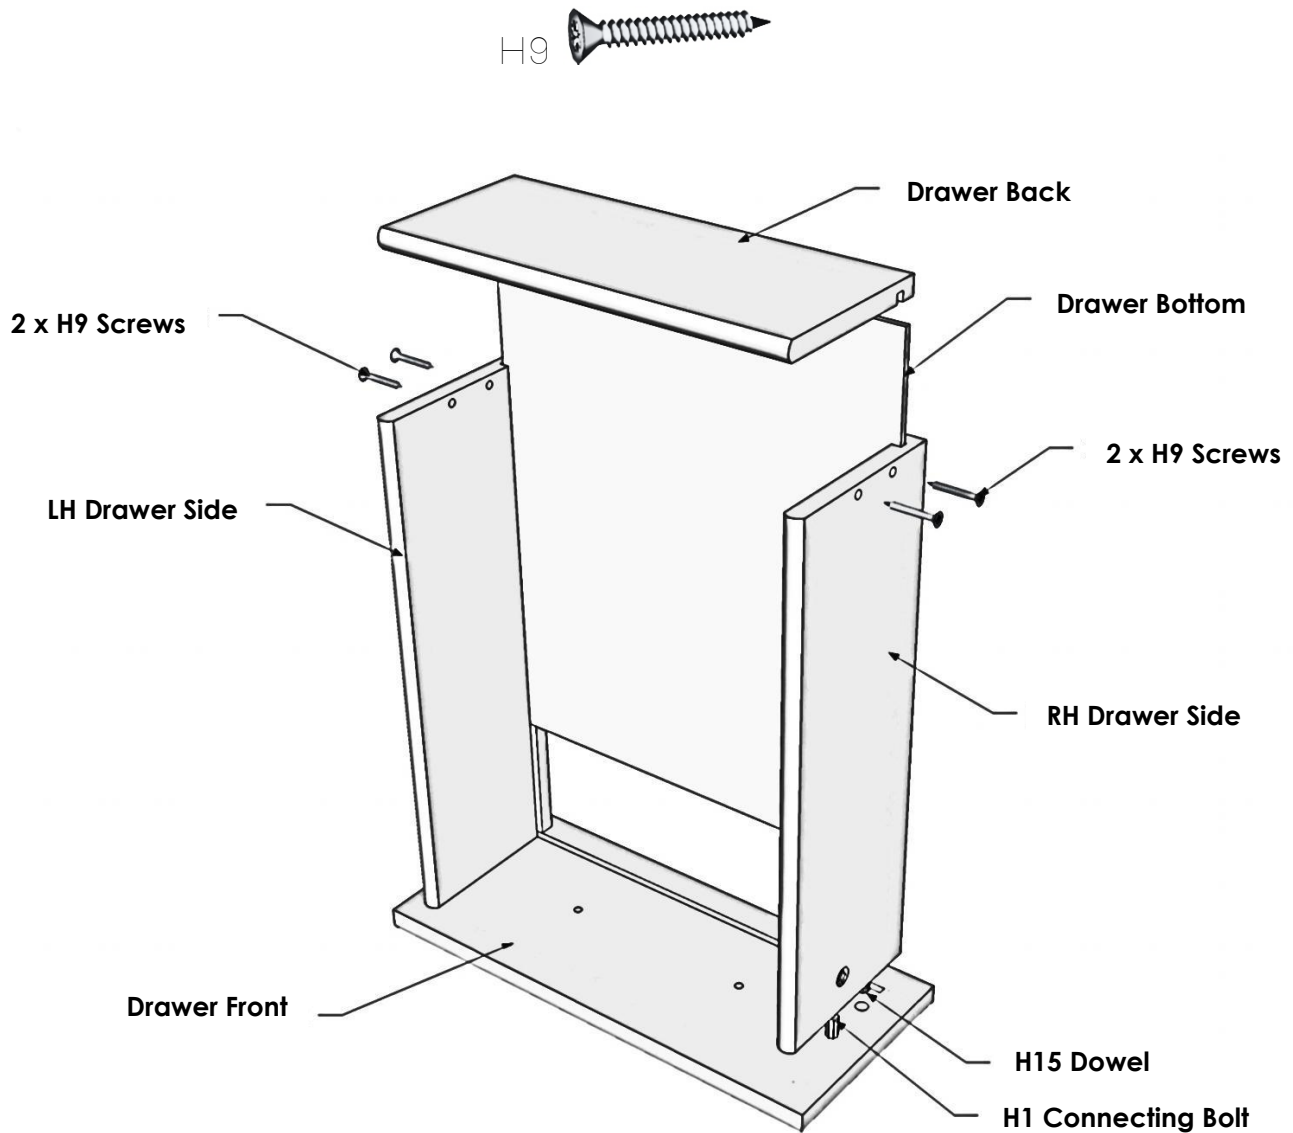


## STEP 10 - ATTACH THE DRAWER SLIDES

- Turn the drawer upside-down as shown and attach the **Drawer Slides** (DR and DL) with the four **H6 Small Woodscrews** as shown below. Ensure that the ends of the slides without the wheels are hard up against the back of the drawer front as shown. Each slide requires two screws.

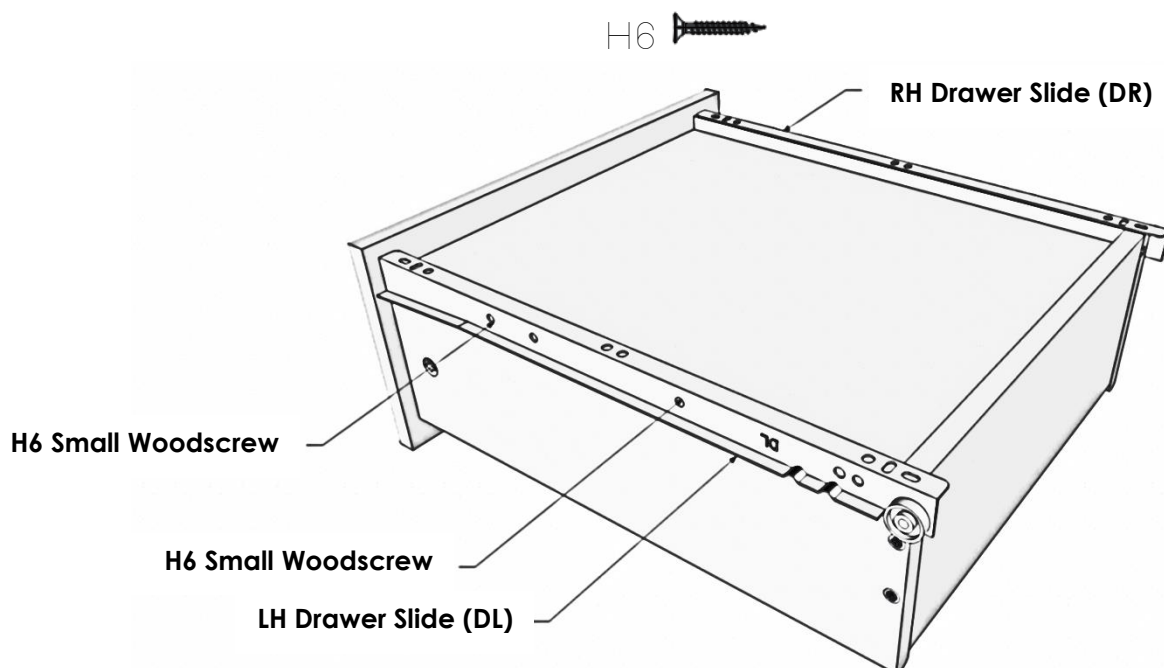

## STEP 11 - ATTACH HANDLES AND FIT DRAWERS INTO CABINET

- Turn the drawer over and attach the handle using the screws provided.
- Fit the drawers into the cabinet. Start with the top drawers and work your way down.

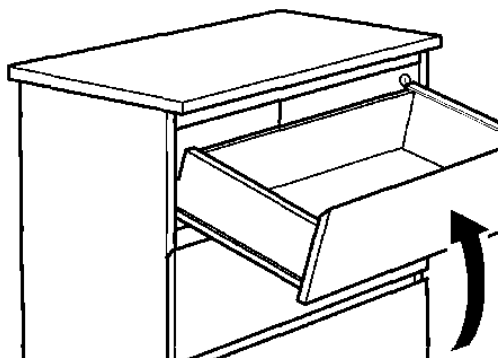

Angle the drawer slightly to ensure that the wheel at the back of the drawer slide goes behind the front wheel on the cabinet slide. Then lift the drawer up and slide it into the channel of the drawer slide.



CONGRATULATIONS, YOUR **BOSTON** 2 DRAWER BEDSIDE IS NOW COMPLETE.  
THANK-YOU FOR SUPPORTING NEW ZEALAND MADE FURNITURE